


SAFETY GUIDE – PLEASE READ CAREFULLY


Please follow all the safety precautions listed below for safety and to reduce the risk of injury or electrical shock. Read all the instructions carefully before using this appliance and keep them for future reference

- Unplug the appliance from the mains supply when not in use, when removing or fitting attachments, and before cleaning any part of the appliance.
- This appliance is for occasional household use only.
- Do not use outdoors or in damp conditions.
- Do not immerse the motor unit or the electrical cord or plug in liquids.
- Do not operate with wet hands.
- Do not use near a source of heat or on an unstable surface.
- Never let children operate this appliance. Close supervision is necessary when this appliance is used near children.
- Ensure that the power cord does not touch any hot surface and that it does not overhang the edge of your work surface.
- When unplugging the power cord, hold the plug top, not the power cord.
- Do not operate the appliance with a damaged cord or plug or after the appliance or any attachment has been damaged. Seek expert assistance.
- Do not use attachments or accessories which are not recommended by the manufacturer. They may cause malfunction or injury.
- Store the appliance and the attachments away from direct sunlight and out of the reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- There are no user serviceable parts in this appliance. Unauthorised dismantling or servicing will void the product warranty.
- Do not use the appliance for any purpose not expressly specified in this manual.
- Do not wrap the mains lead around the appliance. Tuck it into the storage pocket before storing the appliance.


When opening cans


 **CAUTION:** Avoid contacting moving parts. Keep hands, hair, clothing, away from the drive wheel and piercing blade during operation.

 **CAUTION:** Always handle an opened can and the loose lid with extreme care. The edges will be sharp.

- NEVER open pressurised cans containing fizzy drinks or similar or aerosol cans.
- NEVER open cans of flammable liquids such as lighter fluids.

When sharpening knives

 **CAUTION:** Never hold a knife by the blade, use the handle.

 
 **CAUTION:** Always handle knives with care. Never test blade sharpness with your fingers or skin.

- Ensure that knives are clean before sharpening.
- Never force the blade down onto the sharpener.
- The sharpener is not designed to sharpen serrated knives.

ELECTRICAL INFORMATION

Before using this appliance ensure that the voltage of your electricity supply is the same as that indicated on the rating plate on the side of the appliance.

CONTROLS AND FEATURES

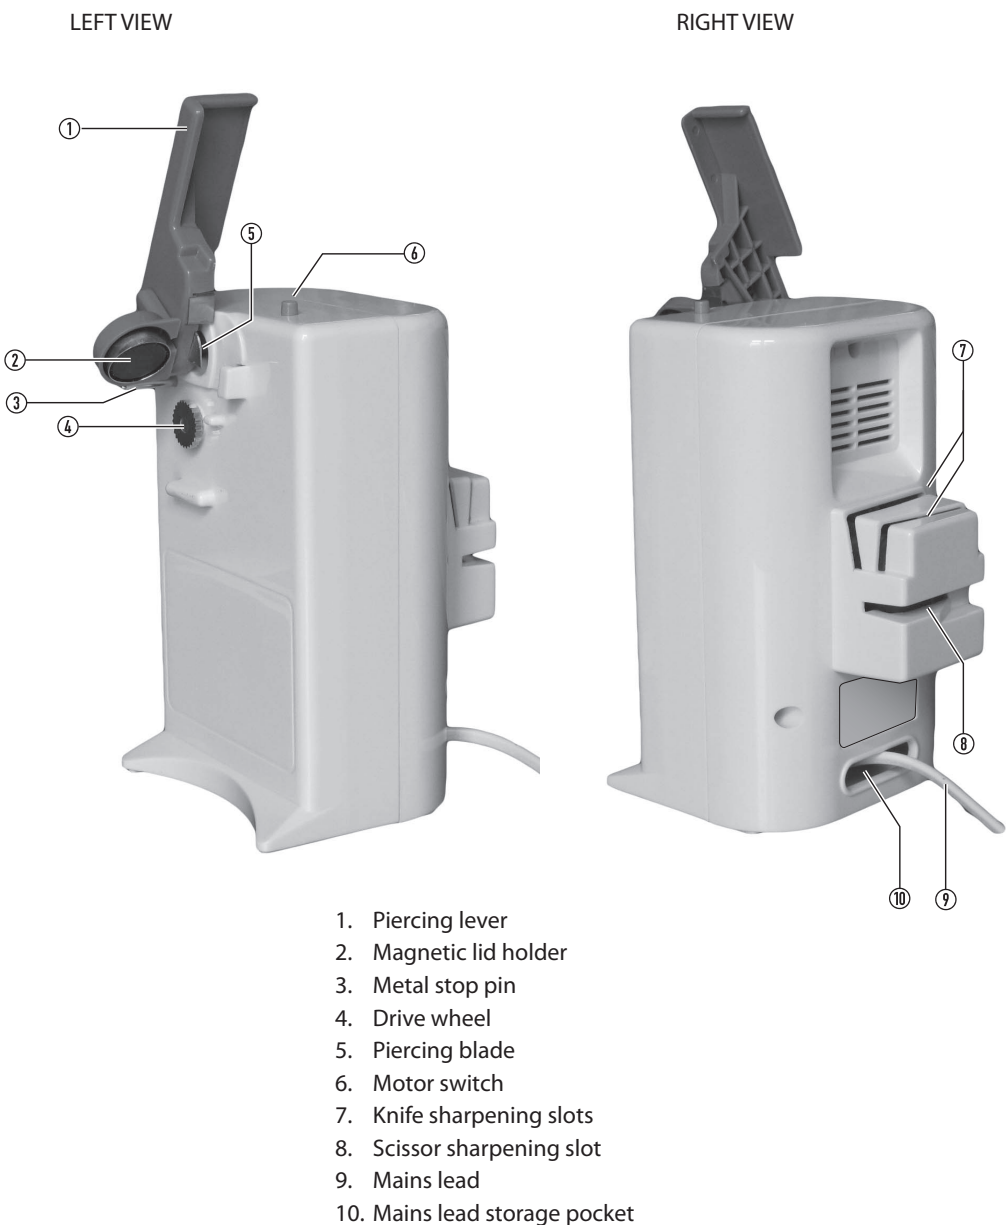

- Piercing lever
- Magnetic lid holder
- Metal stop pin
- Drive wheel
- Piercing blade
- Motor switch
- Knife sharpening slots
- Scissor sharpening slot
- Mains lead
- Mains lead storage pocket

PRELIMINARIES

Unpack the appliance and attachments carefully. If you dispose of the packaging, do so having regard to any recycling regulations in your area.

The packaging contains:


- The can opener/knife sharpener unit
- The operating lever with piercing blade
- The magnetic lid holder


If any item is missing or damaged please contact the Tesco store where you purchased the item, or your nearest Tesco store. Please have your receipt ready when you call.

ASSEMBLING THE CAN OPENER

The operating lever and lid retainer must be assembled to the main unit before opening any cans.


- Before assembling these components, ensure that the appliance is disconnected from the mains.
- Referring to the drawing below, hold the operating lever in a vertical position and insert it into the keyhole slot in the side of the main unit.

 **CAUTION:** Take care to avoid contact with the piercing blade when fitting the operating lever.

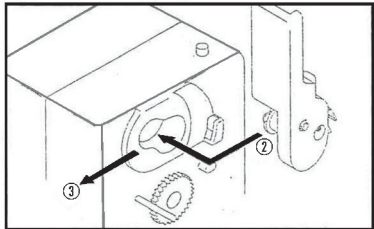

- Once inserted, press the lever forward as shown by the arrow until the lever clicks into place.

- Referring to the drawing below, slide the magnetic lid holder onto the pin on the operating lever.

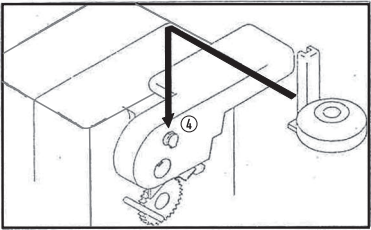

Your can opener is now ready to use.


MAXIMUM OPERATING TIME

The maximum time that you can operate your can opener or knife sharpener for is 5 minutes. After 5 minutes of operation, leave the appliance to stand for 10 minutes to cool.


OPERATION

Opening a can:

- Raise the operating lever.
- Plug the can opener into the mains. Switch on the mains supply.
- Steadying the can opener with the right hand, hold the can against the drive wheel and lift it until it touches the metal stop pin (circled).

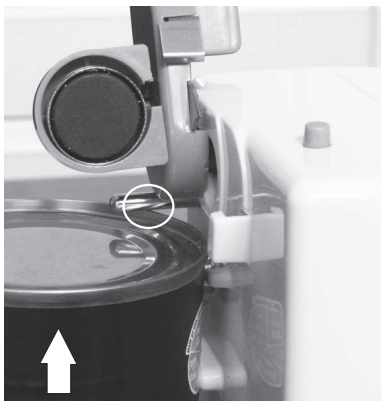

- Lower the operating lever slowly, ensuring that the piercing blade passes over the rim onto the top of the can.

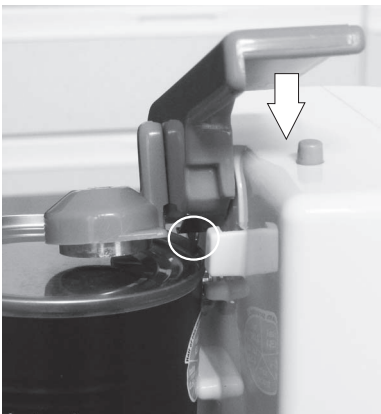

- Press the operating lever down further.

The top of the can will be pierced, the motor will start to run and the drive wheel will rotate the can.

- After one rotation, when the can lid has been completely cut from the can, raise the operating lever slightly.

The motor will stop.

- Hold the can and raise the operating lever to the vertical position.
- Lift the can away from the opener and the lid will be retained by the magnetic lid holder.
- Carefully remove the cut lid from the magnetic lid holder.

CAUTION: The edges of the lid will be sharp.


- Disconnect the can opener from the mains when you are finished.

Sharpening a knife:

- Prepare the knives that you want to sharpen. The knives should be clean and not serrated (the sharpener will not sharpen serrated knives).
- Raise the operating lever.
- Plug the can opener into the mains. Switch on the mains supply.
- Hold the operating lever down and steady the can opener with your left hand.

The motor will start.

- Holding the knife handle with your right hand, draw the knife slowly towards you through the left hand knife sharpening slot. There is no need to press down on the blade.

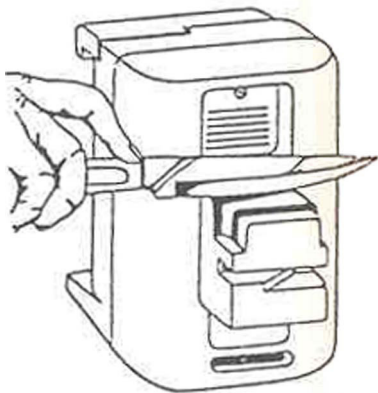

- Repeat the above step, drawing the knife through the right hand knife sharpening slot.
- Repeat the previous two steps three or four times until the knife is sharp.
- When you have finished sharpening, lift the operating lever.

The motor will stop.

- Disconnect the can opener from the mains when you are finished.
- Wash sharpened knives before use.

Sharpening scissors:

- Follow the procedure for sharpening knives, but draw each blade of the scissors towards you through the scissor sharpening slot on the side of the sharpener.



AFTER USE

After using the can opener or knife sharpener, disconnect it from the mains, clean the appliance and tuck the mains lead into the storage pocket. Store it securely out of the reach of children.

CLEANING

Disconnect the appliance from the mains before cleaning.

Unclip the operating lever and magnetic lid holder from the main body of the can opener for cleaning and wash in warm, soapy water.

The body of the appliance can be wiped clean with a damp cloth. Never use abrasive cleaners or scouring creams.

SPECIFICATIONS

Model:..... CO10

Voltage:..... 230-240 V~, 50 Hz

Power consumption:... 40 W

Net Weight:..... kg



Class II construction double insulated.

This product must not be connected to earth.

WARRANTY

Your appliance is covered by a warranty for 12 months from the date of purchase. If a fault develops during this period, please return the unit to your nearest Tesco store together with the original receipt as proof of purchase. This warranty in no way affects your consumer rights



UK: Waste electrical products /batteries should not be disposed of with household waste. Separate disposal facilities exist, for your nearest facilities.

See www.recycle-more.co.uk or in-store for details.

ROI: Produced after 13th August 2005. Waste electrical products/batteries should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority or retailer for recycling advice.

